

THE KINGSLY RESIDENCE - HVN#1002

ASSEMBLY INSTRUCTIONS



Before starting this kit, make sure you read through all the instructions carefully. Always remember to dry fit parts and sand as needed.

We use two kinds of glue when assembling our kits. Super glue (cyanoacrylate) or PVA glue.

You can repaint or weather our kits easily! The paint we use is a great base primer and will take paint nicely.

If you have any issues during assembly, please contact us and we'll always help!

We would like to take the time to thank you for purchasing a Black Site Studios product!

www.blacksitestudio.com

WE SUGGEST HAVING THESE TOOLS ON HAND



IMPORTANT SYMBOLS YOU'LL FIND ON YOUR JOURNEY



ATTENTION



DRY FIT



NO GLUE




GLUE




TRIM/SAND

THE KINGSLEY RESIDENCE - HVN#1002


PARTS LIST

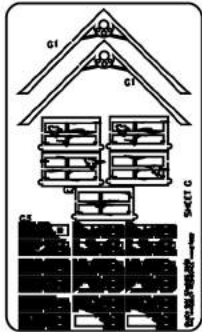


SHEET G

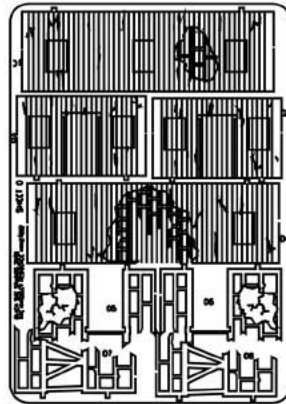


SHEET D

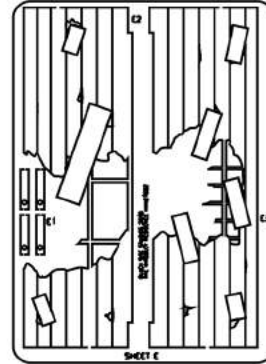


SHEET E

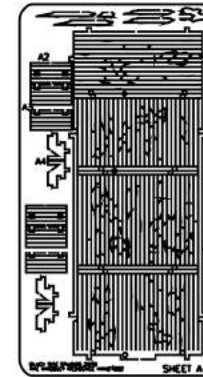


SHEET A

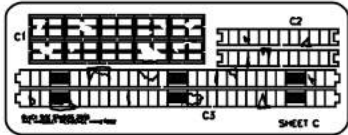


SHEET C

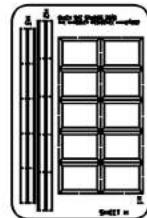

SHEET H

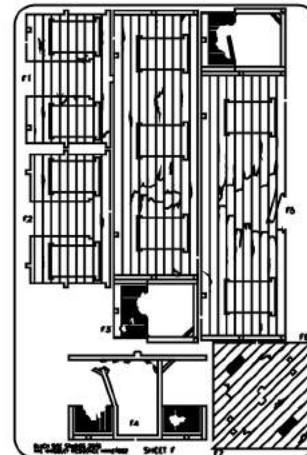




SHEET F

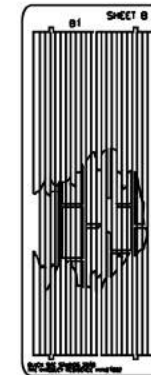


SHEET B

LAY ALL THESE SHEETS
OUT AND CHECK YOUR PARTS
BEFORE GETTING STARTED



THE KINGSLEY RESIDENCE - HVN#1002

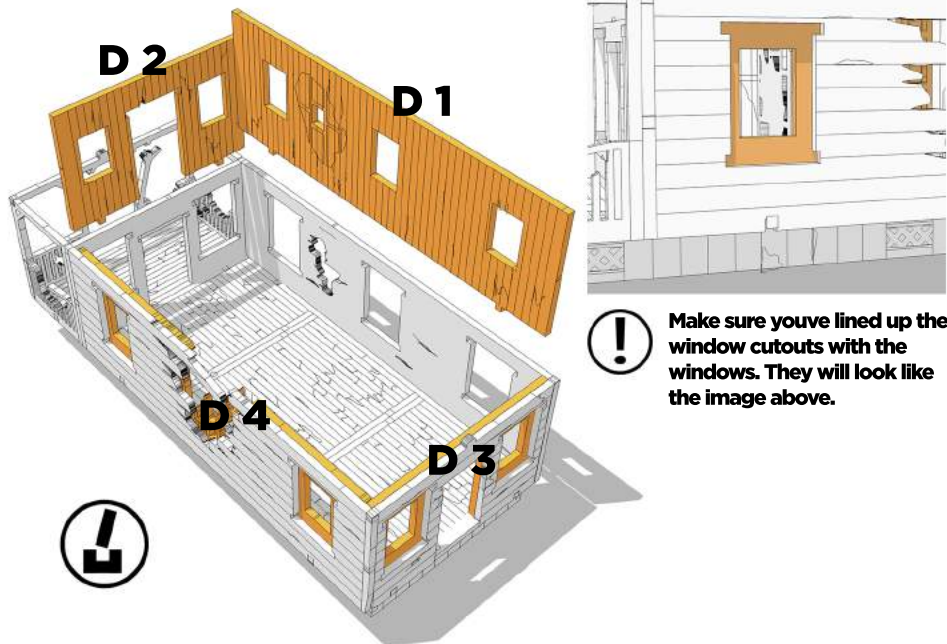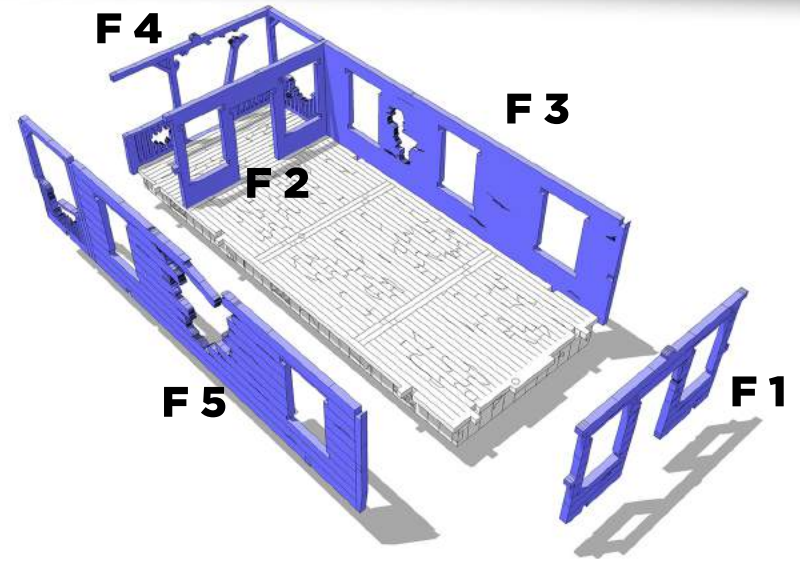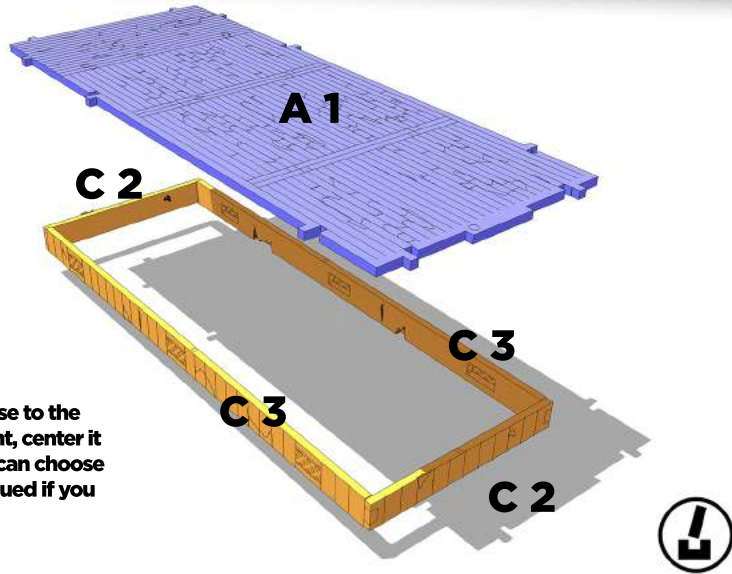

⚠ Make sure you've lined up the window cutouts with the windows. They will look like the image above.

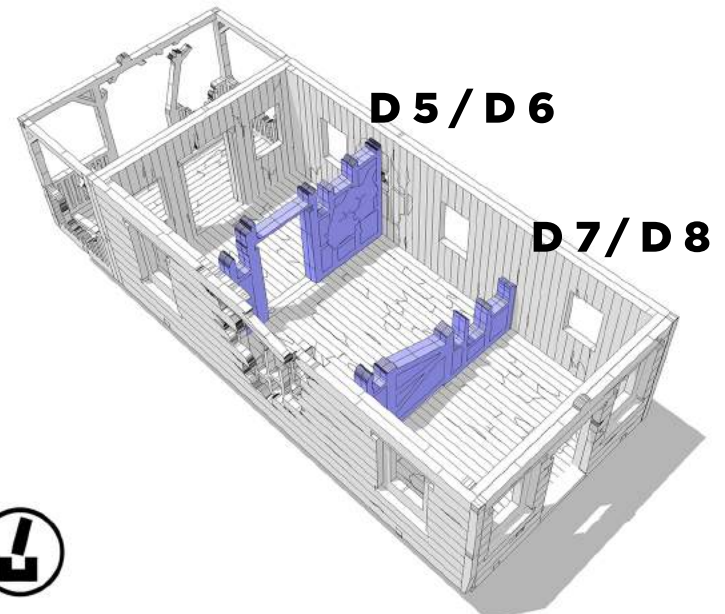


THE KINGSLY RESIDENCE - HVN#1002

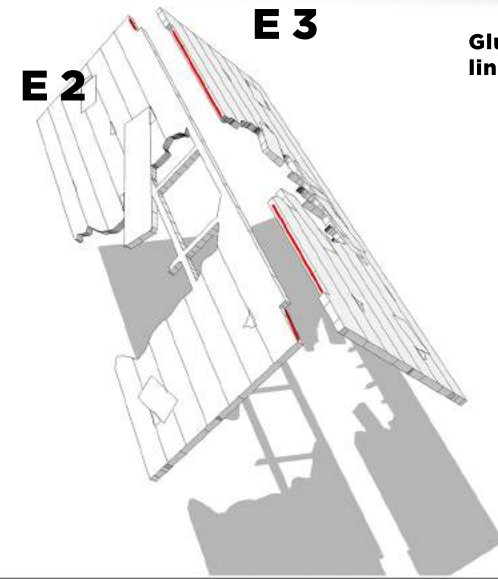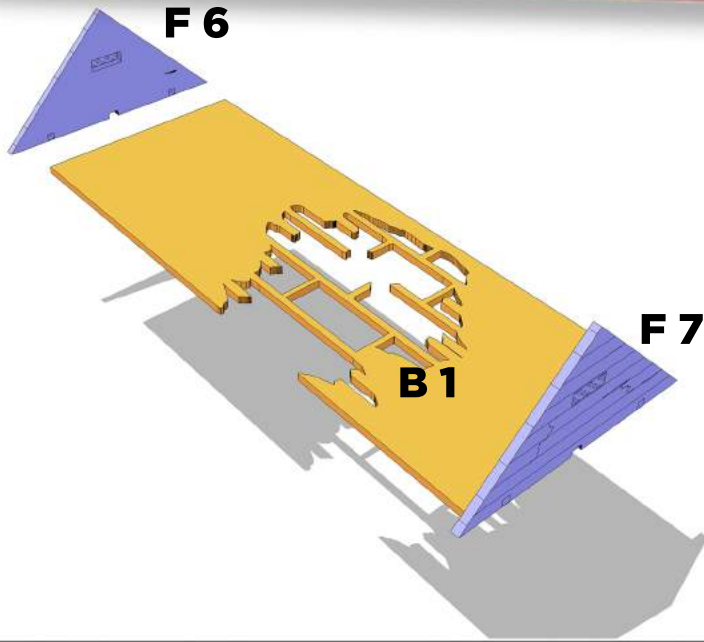


Glue roof pitch a long red line.

Center the roof to the structure. Then glue together


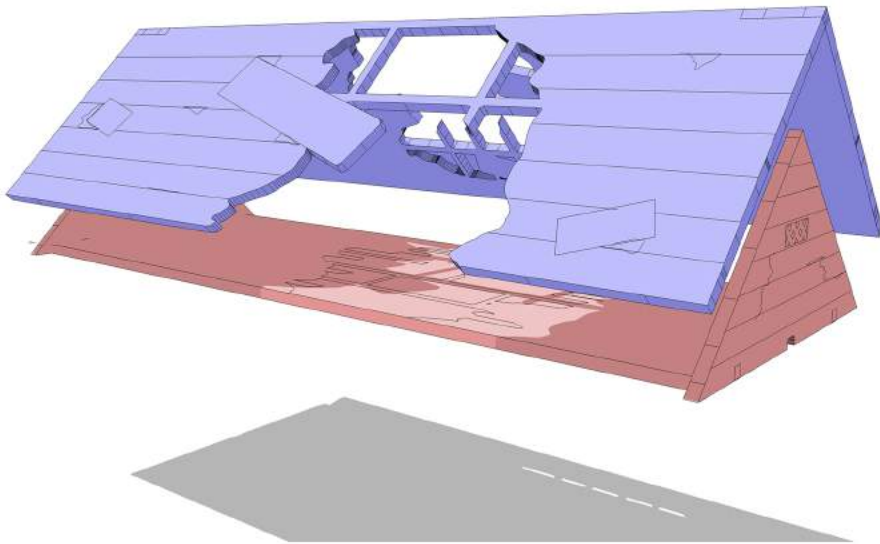


G1


Glue second G1 to the other side

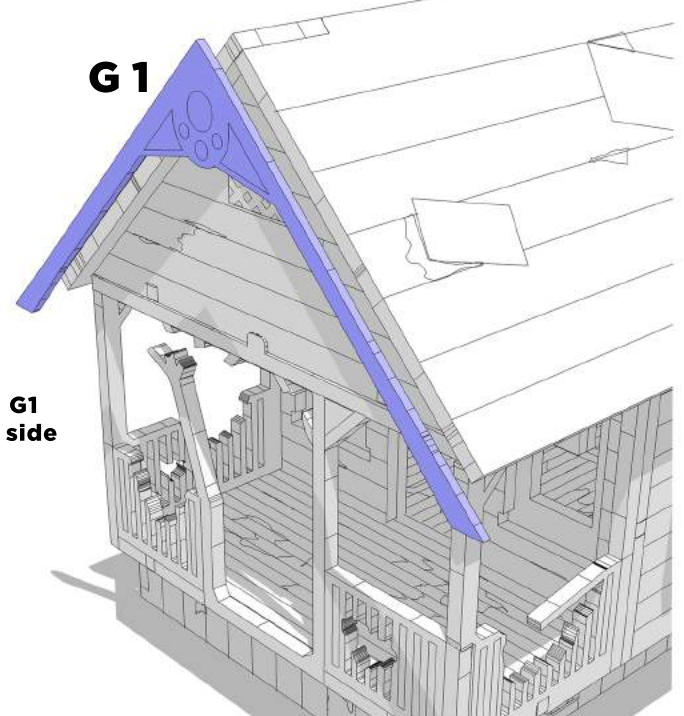

THE KINGSLEY RESIDENCE - HVN#1002

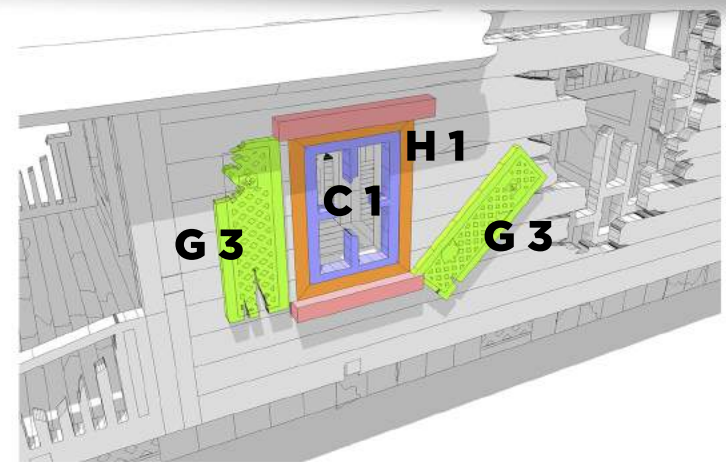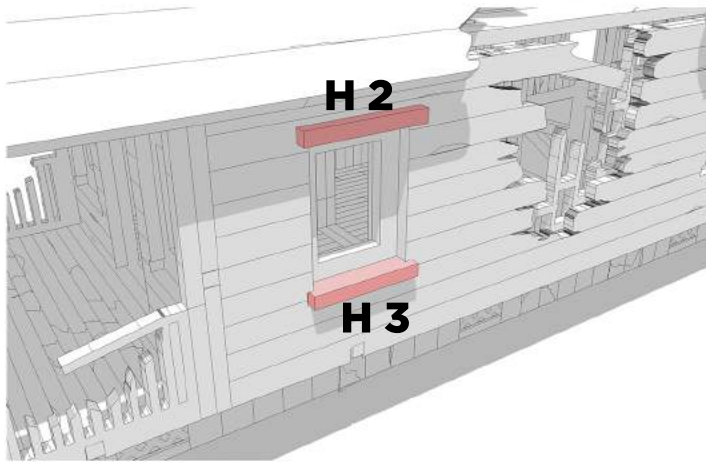

**GLUE H1 IN FIRST, THEN C1
MAKE SURE TO GLUE G3 RANDOMLY
ON EACH WINDOW.**

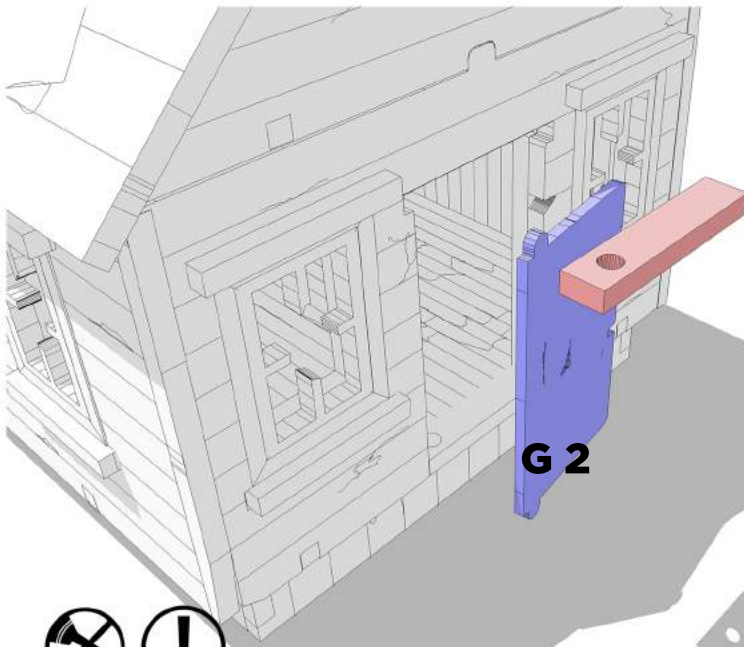


The doors on this kit are designed to operate.


You'll notice there are holes on both the floor and in the top hinge (part E1)

This step can be fairly finicky. Its very important that you dont get glue inside the holes. This will stop the door from moving.

Instead you need to put some glue a long the top of the hinge and push it into place with the door. A standard trigger clamp will make this MUCH easier. You can also sand down Part E1 so it fits smoothly.



2X

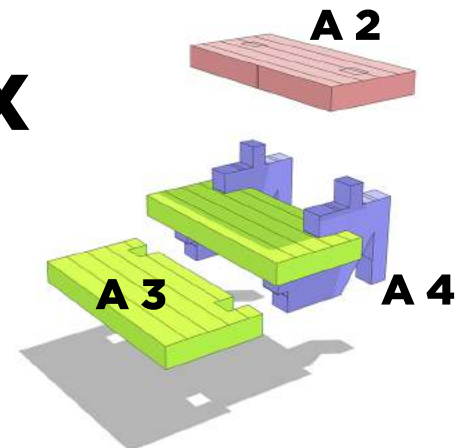

THE KINGSLEY RESIDENCE - HVN#1002

FINISHED PHOTOS

